




HDP37-02
Flywheel Lock

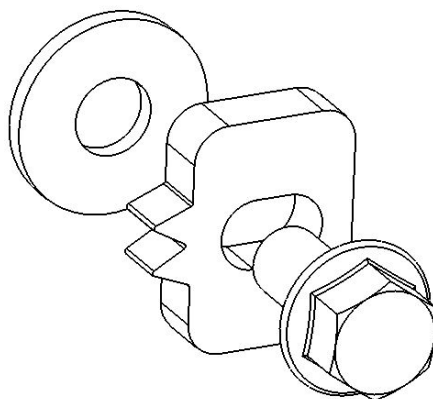

No.	Description	Quantity
1	Honed Flywheel Lock	1
2	M12 Flange Bolt	1
3	Heavy Washer	2

Installation Notes

1. With gearbox removed, mount flywheel lock to one of the m12 threaded holes in the engine block bell housing as shown below
2. Adjust flywheel lock so that you have good engagement with the ring gear teeth
3. Torque the bolt to 110 N.m (80 ft.lbs)
4. Honda clutch and flywheel bolts have RH threads, turn fasteners CCW to loosen

