


HOLD TEMPLATE
INLINE WITH CALIPER
MOUNT

ENSURE
YOU HAVE 5MM
OF CLEARANCE TO RIM
BARREL

TOWARD
OUTSIDE
OF CAR

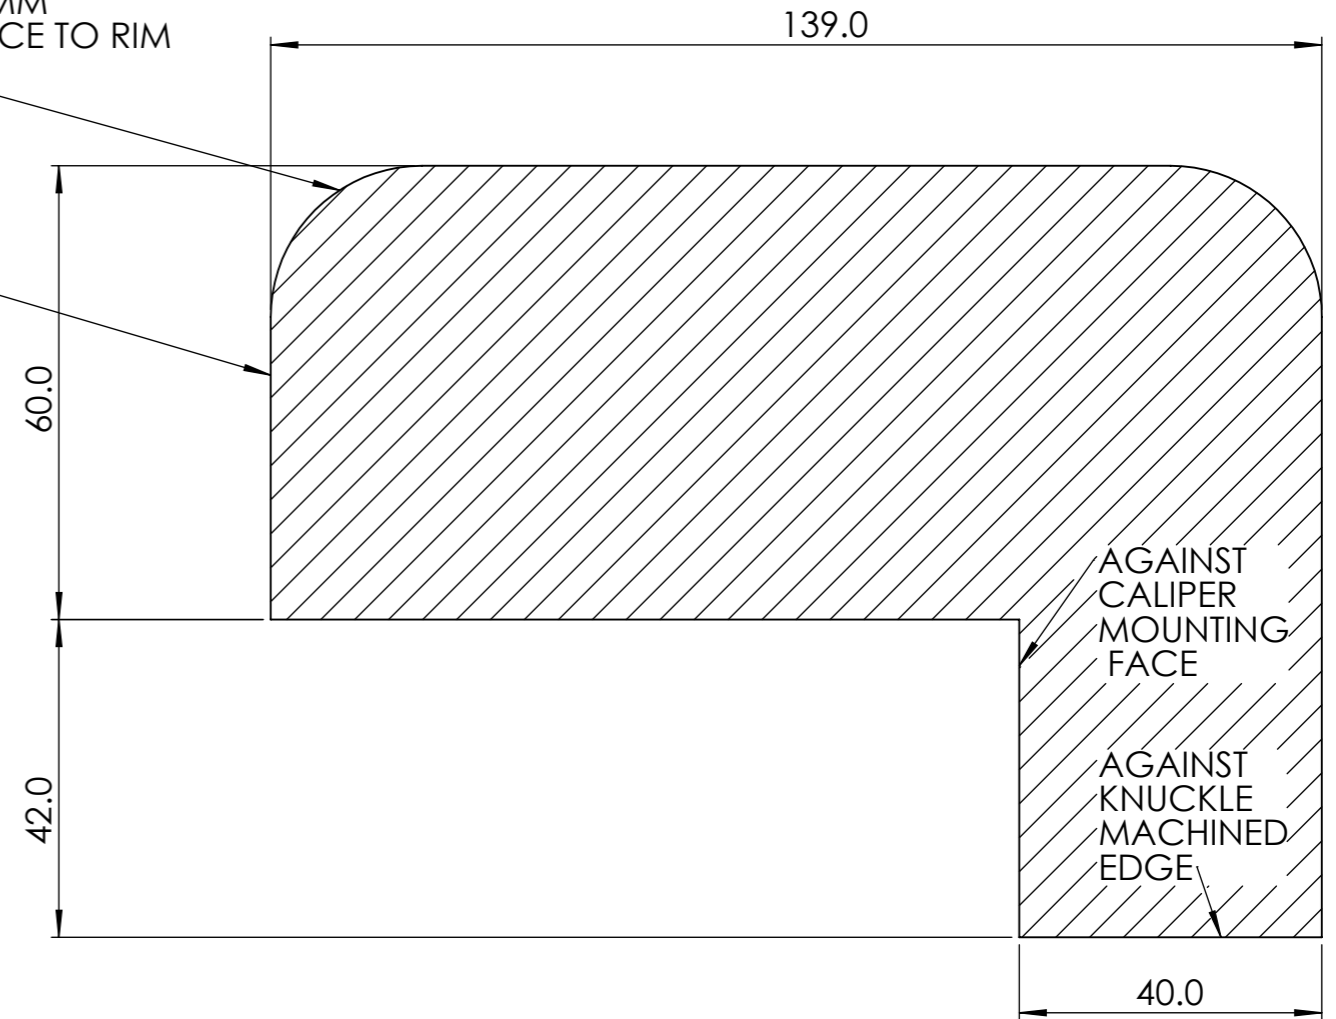


NOTES:
DOCUMENT FORMAT A3
SCALE 1:1

IMPORTANT, IF USING TEMPLATE WITHOUT DISC FITTED, USE 6MM (1/4") OF WASHERS TO SPACE WHEEL OFF WHEEL HUB



TITLE:
986 CALIPER MOUNT KIT WHEEL CLEARANCE TEMPLATE
262mm KNUCKLE



	NAME	DATE	DWG NO.		
DRAWN	GH			basic_porsche_kit_template	A3
CHECKED					
			DO NOT SCALE DRAWING	SCALE: 1:1	SHEET 1 OF 1