


HOLD TEMPLATE  
INLINE WITH CALIPER  
MOUNT

ENSURE  
YOU HAVE 5MM  
OF CLEARANCE TO RIM  
BARREL

TOWARD  
OUTSIDE  
OF CAR

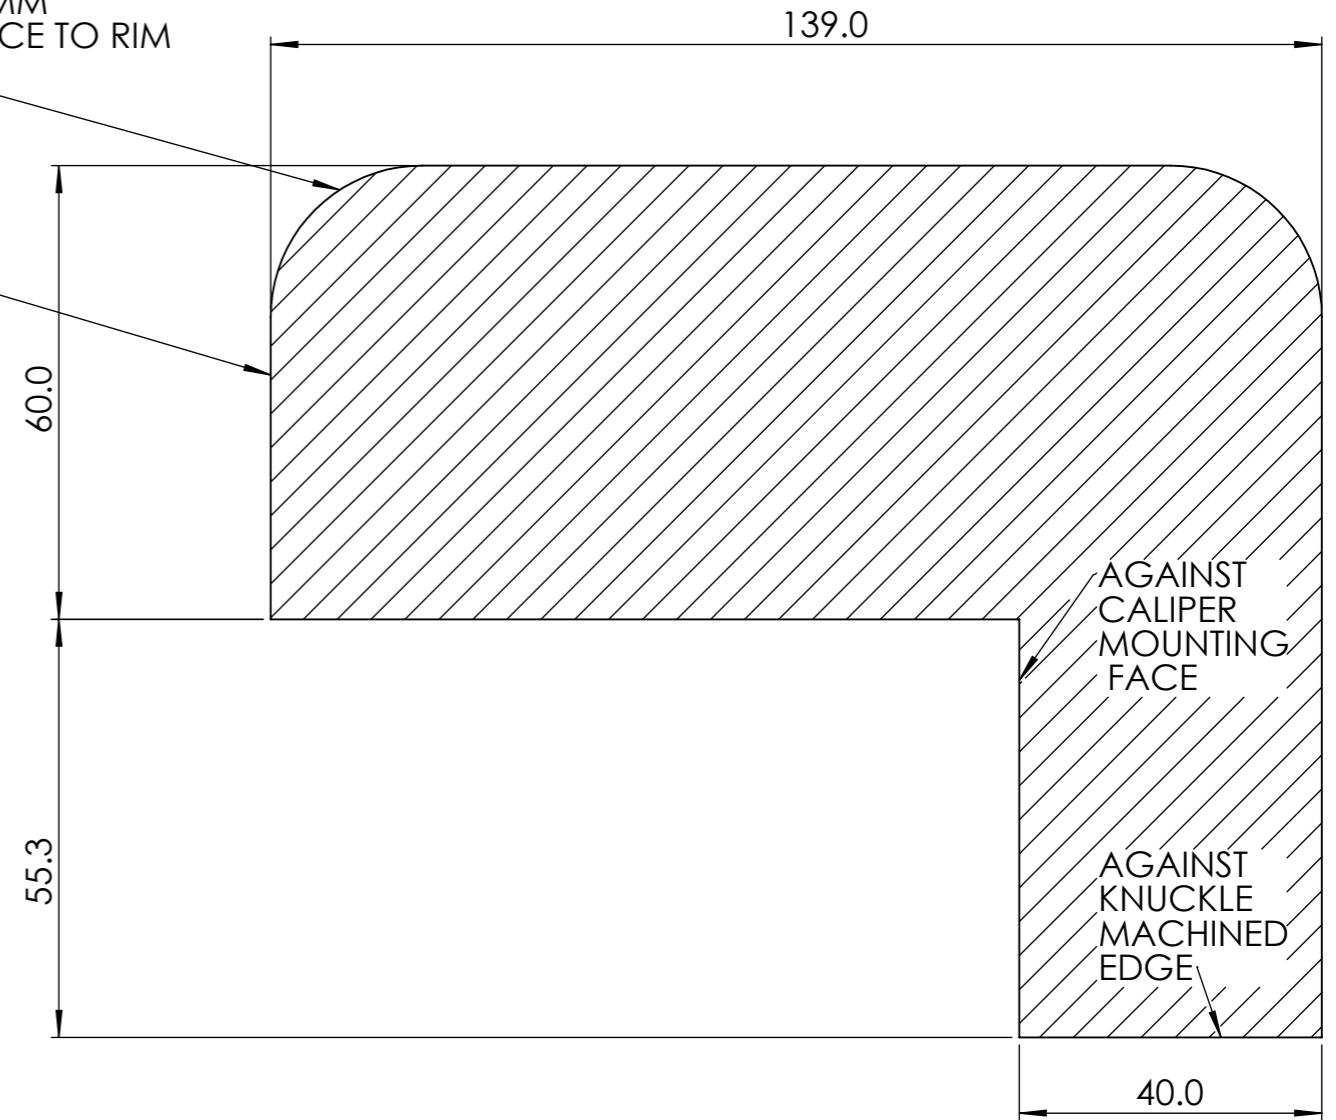


**NOTES:**  
DOCUMENT FORMAT A3  
SCALE 1:1

IMPORTANT, IF USING TEMPLATE WITHOUT DISC FITTED, USE 6MM (1/4") OF WASHERS TO SPACE WHEEL OFF WHEEL HUB



TITLE:  
986 CALIPER MOUNT KIT WHEEL CLEARANCE TEMPLATE  
242mm KNUCKLE



	NAME	DATE	DWG NO.	
DRAWN	GH		basic_porsche_kit_242_template	A3
CHECKED			DO NOT SCALE DRAWING	SCALE: 1:1
				SHEET 1 OF 1