


HDP44-01 D16 Coolant Spacer

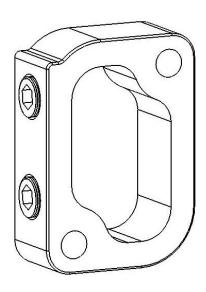

No.	Description	Quantity
1	Honed Coolant Spacer	1
2	1-8 NPT Stainless Plug Fittings	2
3	M6 x 50 Flange Head Screw ZP	2

Installation Notes

- 1. We recommend using Honda bond to seal the coolant spacer to both the head and the OEM coolant
- Torque the m6 flange screws to 10 N.m (7 ft.lbs)
 We recommend applying Loctite 577 hydraulic sealant to the 1-8 NPT threads before installing either your new fittings or the supplied plugs