



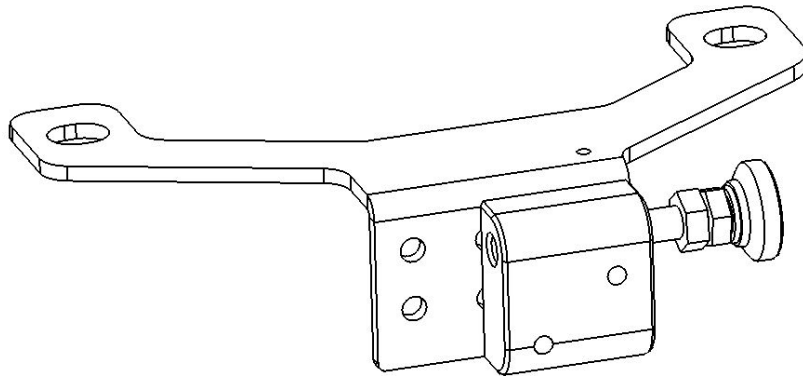

No.	Description	Quantity
1	Master Cylinder Brace Bracket	1
2	Swivel Foot Mount Block	1
3	M8 Swivel Foot	1
4	M6 x 12 Flange Bolts	2


General Instructions

1. Honed's master cylinder braces can be configured to suit either the master cylinder position of the Honed Booster Delete Kit or the OE master cylinder position refer to the images below to understand how to arrange the bracket and swivel foot mount block
2. The EG/DC2 master cylinder brace mounts on the same studs as the upper control arm inner pivot bushes
3. The torque spec for the m6 flange bolts is: 14 Nm (10 lbft)

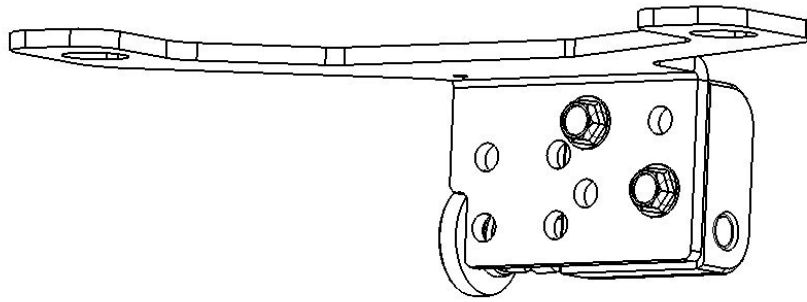


Configurations


HDP3-25 EG/DC2 Right Hand Drive with Honed Booster Delete

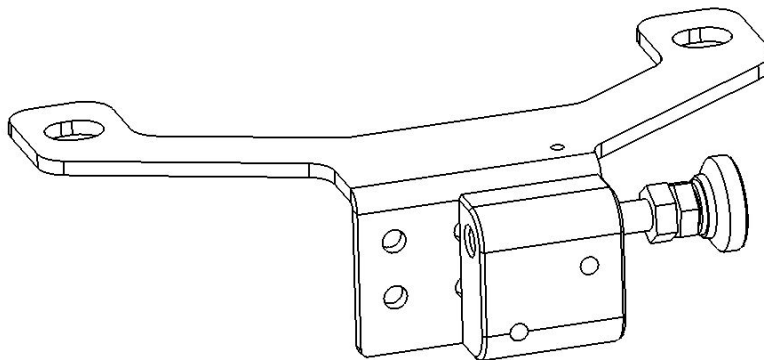

HDP3-25 EG/DC2 Right Hand Drive with Booster

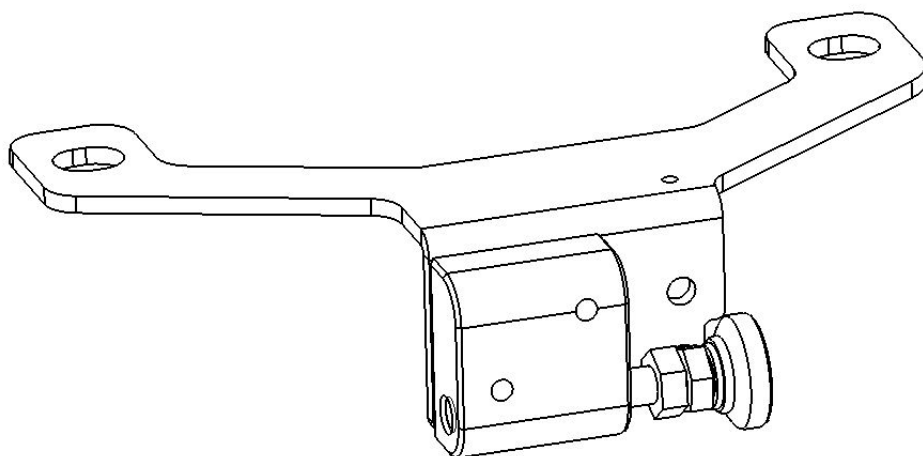

HDP3-26 EG/DC2 Left Hand Drive with Honed Booster Delete

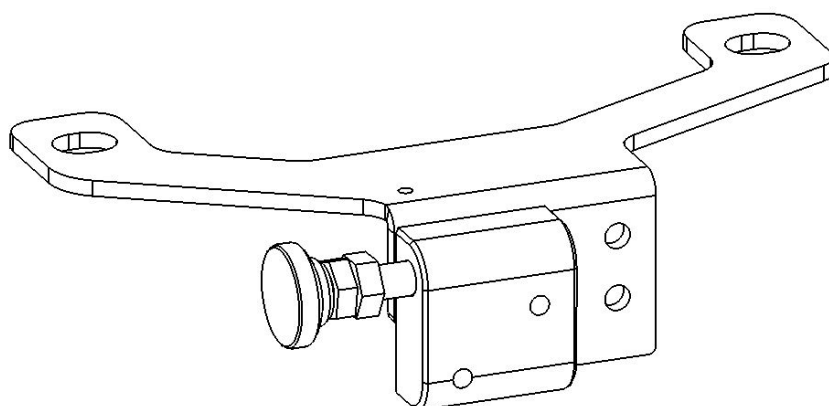

HDP3-26 EG/DC2 Left Hand Drive with Booster

